



Airbrush

MODEL NUMBER: BD-116C

USER GUIDE

After Sales Support





Contents

- 1. Welcome Section
- 2. General Information & Safety Instructions
- 3. Contents & Features
- 4. Parts & Assembly
- 4. Changing the Needle
- 5. General Maintenance
- 6. Using the Airbrush
- 7. Specifications
- 7. Trouble Shooting





Congratulations!

You have made an excellent choice with the purchase of this quality AIRBRUSH HEAVEN product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of Airbrush Heaven.

We want you to be completely satisfied with your purchase so this AIRBRUSH HEAVEN product is backed by a comprehensive manufacturer's 1 year warranty and outstanding after sales service through our helpline.

We hope you enjoy using this product for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty, please telephone our helpline for immediate assistance. Faulty product claims made within the 1 year warranty period will be repaired or replaced free of charge provided that you have a satisfactory proof of purchase (keep your receipt/invoice safe). This does not affect your statutory rights. However be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused and/or disassembled other than directed. See warranty certificate for full details at the back of this guide.

After Sales Support

General Information & Safety Instructions

- Industrial applications must follow OSHA requirements.
- Maintain a safe working environment. Keep the work area well lit and make sure there is adequate work space.
- Use the product only in a well ventilated area.
- Check for damaged parts including hoses before using this product. Carefully check that it will operate properly and perform its intended function. Replace or repair damaged or worn parts immediately.
- Always read and adhere to all safety warnings and instructions provided in the directions of the medium being used.
- Wear ANSI approved safety impact eye goggles and an ANSI approved dust mask or respirator when using this product.
- Do not exceed the maximum pressure rating of 50 PSI.
- Adult supervision is advised when children are using this product.
- The airbrush is designed only to spray non-flammable medium. Never spray petrol, paraffin, or any flammable liquids.

WARNING! The warnings, precautions, and instructions discussed in this manual cannot cover all possible conditions and situations that may occur. The operator must understand that common sense and caution are factors, which cannot be built into this product.

After Sales Support

Contents & Features



Contents


- 1 x Single Action Airbrush
- 3 x nozzles (0.3mm, 0.5mm & 0.8mm)
- 3 x needles (0.3mm, 0.5mm & 0.8mm)
- 1 x 2cc Metal Reservoir Cup
- 1 x 5cc Metal Reservoir Cup & Cap
- 1 x 13cc Metal Reservoir Cup & Cap
- 1 x Hose
- 1 x Hose Adaptor Ring
- 2 x Hose Connectors
- 1 x Nozzle Spanner
- 1 x Fitted Protective Case

Features

- Single action trigger
- Multiple metal cups
- Multiple nozzles
- Multiple adjustable needles
- Hose Adaptors

After Sales Support

Parts & Assembly

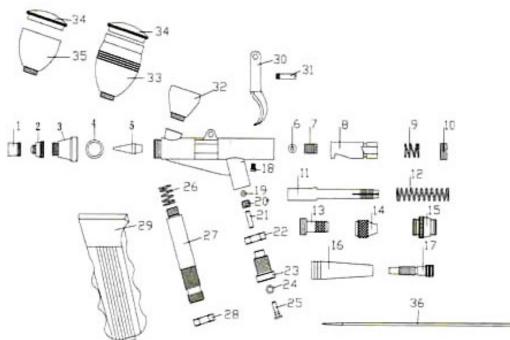

- 1. Needle Cap
- 2. Nozzle Cap
- 3. Head Cap
- 4. O-Ring
- 5. Nozzle
- 6. O-Ring for Needle Guide
- 7. Needle Guide
- 8. Needle Nut
- 9. Spring
- 10. Stopper

12. Spring

11. Needle Chucking Guide

- 13. Spring Case
- 14. Needle Check Net
- 15. Nut
- 16. Standard Handle Adjusting
- 17. Adjusting Screw
- 18. Guide Screw
- 19. 0-Ring
- 20. Seal Screw
- 21. Relieve Valve Stem
- 22. Nut
- 23. Valve Assembly
- 24. 0-Ring

- 25. Screw for Valve
- 26. Spring
- 27. Valve Spindle
- 28. Hex Nut
- 29. Holder
- 30. Trigger
- 31. Trigger Bolt
- 32. Colour Cup 2cc
- 33. Colour Cup 13cc
- 34. Cup Cover
- 35. Colour Cup 5cc
- 36. Needle

Changing the Needle & Nozzle

- Unscrew and remove the handle.
- Loosen the needle locking nut.
- Pull the needle out & remove the nozzle cap.
- Unscrew the nozzle counter clockwise & remove.
- Screw the new nozzle into place, first with fingers then spanner.
- Replace the nozzle cap and insert the chosen needle.
- Tighten the needle locking nut.
- Replace the handle and screw back onto the airbrush body.

Please Note:

DO NOT over tighten the nozzel as it will render the airbrush unuseable. For a full video demonstation please visit www.airbrushheaven.co.uk

After Sales Support



General Maintenance

Storage

- Always disconnect the airbrush from its air supply source before any maintenance on the airbrush body.
- When not in use, tools and equipment should be kept in a dry location to inhibit rust.

Basic Cleaning

- Empty the reservoir cup or jar of used medium.
- Remove and wipe clean the reservoir cup or jar.
- Reattach the clean reservoir cup or jar and fill with the appropriate cleaning solution.
- Spray the cleaner through the airbrush until it sprays clear.
- Unscrew and remove the handle.
- Loosen the needle locking nut.
- Pull the needle out & wipe down the needle.
- Push the needle back into the airbrush & re-tighten the needle locking nut carefully.
- Replace the handle and screw back onto the airbrush body.
- Re-connect to the airline & spray until dry.

Please Note:

Spray into a cleaning jar or filter of some kind. This keeps overspray out of the air and you. We recommend the Clean Pot available from our website.

For full cleaning advice and video demonstrations please visit: www.airbrushheaven.co.uk

After Sales Support

Using the Airbrush

Setting up & using the Airbrush

- Attach the hose to the compressor. (We recommend our AS-18A or AS-186 compressor for this model)
- Set air pressure to 2-40 PSI on the compressor.
- Remove the protection cap from the airbrush.
- Add your chosen medium to the reservoir cup.
- Press down on the trigger to allow air to flow through the brush.
- Pull the trigger backwards to start spraying.

You can vary the amount of medium flow by tightening or loosening the adjusting screw at the rear of the airbrush.

Always test spray before starting your main project.

Mixing & Thining Medium

Generally, the most common medium used in conjunction with an airbrush is paint. It is highly recommended that you dilute your medium down to the same consistency as semi skimmed milk.

Read the directions on the container to see if thinners or water should be used to dilute the medium to the correct consistency.

When mixing medium, it's highly recommended you use the same brand and type for best results.

Please Note:

Use the correct solvent for thinning: Use lacquer thinner for all lacquer medium, paint thinner for all oil based medium, enamel thinners for all enamel based medium, acrylic thinners for acrylic and clean water for water based medium.

Aways read the label of your selected medium.

After Sales Support

Specifications

- Single action trigger
- 3, 5 & 13cc Metal reservoir cups
- 0.3, 0.5 & 0.8mm Fluid nozzle
- 50 Psi maximum
- 1/8th" BSP (9mm) & 5mm screw connectors

Trouble Shooting

PROBLEM	CAUSE	SOLUTION
Medium leaking.	Head of needle bent or distorted.	Repair or replace parts.
	Nozzle and needle not fully contacted.	Loosen screw, make sure nozzle and needle fully contacted and then screw tightly.
Poor medium	Airbrush nozzle is	Wash nozzle with
atomization.	partially blocked.	relevant cleaner.
	Needle screw loose.	Make sure screw is tight.
Air bubble(s) in the cup.	Faulty nozzle seal ring causes air blowback.	Replace nozzle seal ring.
Medium leaks from back.	The gap between needle and its seal is enlarged.	Take off parts on the back, fasten screw or replace the seal.
Air leaking	Valve lever stuck	Take trigger off; apply lube after cleaning and put trigger back.
Medium spatter.	Bent needle tip.	Replace needle.

After Sales Support



Warranty Certificate

Warranty

This product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion, solely at our option with no charge for parts and labour. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product the consumer has under existing U.K. laws.

Proof of Purchase

This warranty is valid for the original purchase and is not transferable.

Please keep your purchase receipt as proof of purchase and as proof of the date of when the purchase was made. The receipt/invoice must be presented with the warranty card when making a claim under this warranty.

Service during the Warranty Period

Please ensure the product is properly packaged so as to ensure that no damage occurs in transit. Also make sure that you have included a detailed explanation of the problem.

Extent of the Warranty

This warranty is limited to defects in workmanship or parts. All defective products or parts will be repaired or replaced. This warranty does not extend to accessories.

 
Normal Wear and Tear

This warranty does not cover normal wear and tear of the product or parts.

Exclusions

This warranty does not cover the following:

- Any defect caused by accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by the distributor.
- Any product that has been damaged by lightning strike either directly or indirectly, or on a main's or vehicle outlet power surge or liquid ingress.
- Any product that has not been installed, operated or maintained in accordance with the manufacturer's operating instructions provided with the product.
- Any product that has been used for purposes other than domestic use.
- The product if it is located outside of the U.K., N. Ireland or Republic of Ireland
- Any damage caused by improper power input or improper cable connection.







Warranty Card

Airbrush

Model Number: BD-116C

Please keep your purchase receipt/invoice together with your warranty card

Name: _____

Address: _____

Date of purchase:

Location of purchase:

Fault Description:

We recommend that you attach a photocopy of your receipt/invoice, showing the date of purchase, to this warranty card and keep it for your reference. In the event of a product fault, please call the After Sales Support team. Please ensure that you have the product details (as shown on this card) to hand so that the support team are able to respond as quickly and efficiently as possible.

After Sales Support

UK/N.IRELAND HELPLINE N°: 01270 508530 WEBSITE: www.airbrushheaven.co.uk EMAIL: enquiries@airbrushheaven.co.uk

Service Helpline

QUESH LTD, B7, FIRST BUSINESS PARK FIRST AVENUE, CREWE, CHESHIRE. CW1 6BG



For further help, advice and video demonstrations please visit: www.airbrushheaven.co.uk